



# 66 Block

INSTALLATION I N S TRUCTIONS

## ICC's Preterminated 66 Wiring Blocks with 8 or 12 Jacks

ICC's Preterminated 66 wiring blocks with 8 or 12 jacks are easy to install and cut installation time in half. ICC's 66 blocks can be used in a variety of applications including residential and commercial applications, and work with different types of low speed data and voice systems. Choose from 6P4C, 6P6C, or 8P8C 66 wiring blocks.

This installation instruction is designed for the following part numbers:

IC06626P4C IC06686P6C IC06628P8C

#### **INCLUDES:**

Preterminated 66 Block

Hinged Cover

Jack Bezel


89D Mounting Bracket



## IC06626P4C

Preterminated 66-Block with 12 RJ-11 6P4C Jacks: (1) Preterminated 66 Block

- (1) 89D Mounting Bracket
- (12) 6P4C RJ-11 Jacks
- (1) Hinged Cover

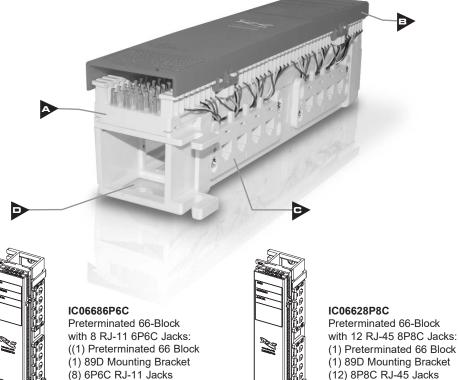

- (1) Hinged Cover


with 12 RJ-45 8P8C Jacks:

- (12) 8P8C RJ-45 Jacks
- (1) Hinged Cover

AVAILABLE ACCESSORIES

ICC recommends the following accessories for a fast and easy installation.

Single Blade Punch Down Tool ICACSPDT00

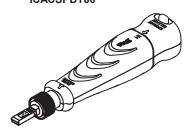

66 Block Bridging Clips (100Pack) IC066BRCLP



25-Pair Telco Cable **ICPCSTXXXX** 





CUSTOMER CARE/TECHNICAL SUPPORT • CS@ICC.COM/888-275-4422 (ASK-4-ICC)


www.icc.com

### **Teminating Incoming Line**

Terminating the incoming line on the 66 Block requires using a punch down tool with a 66 terminating blade.

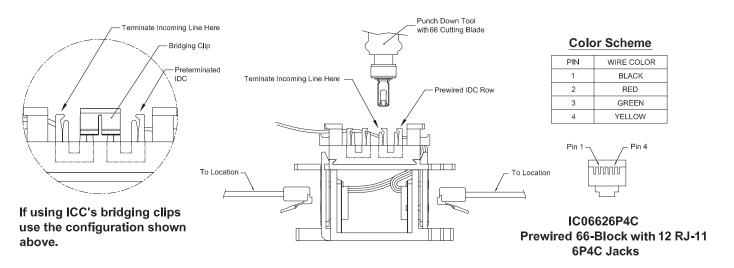

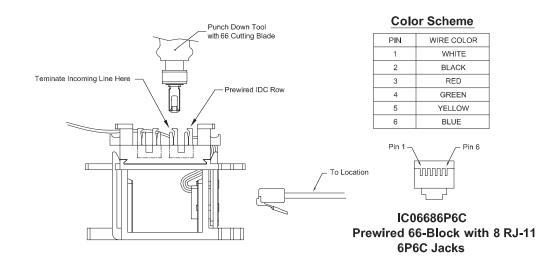

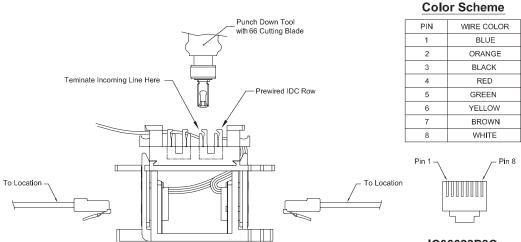

IC06628P8C Prewired 66-Block with 12 RJ-45 8P8C Jacks